


BMW HP2 Sport 2008- completo

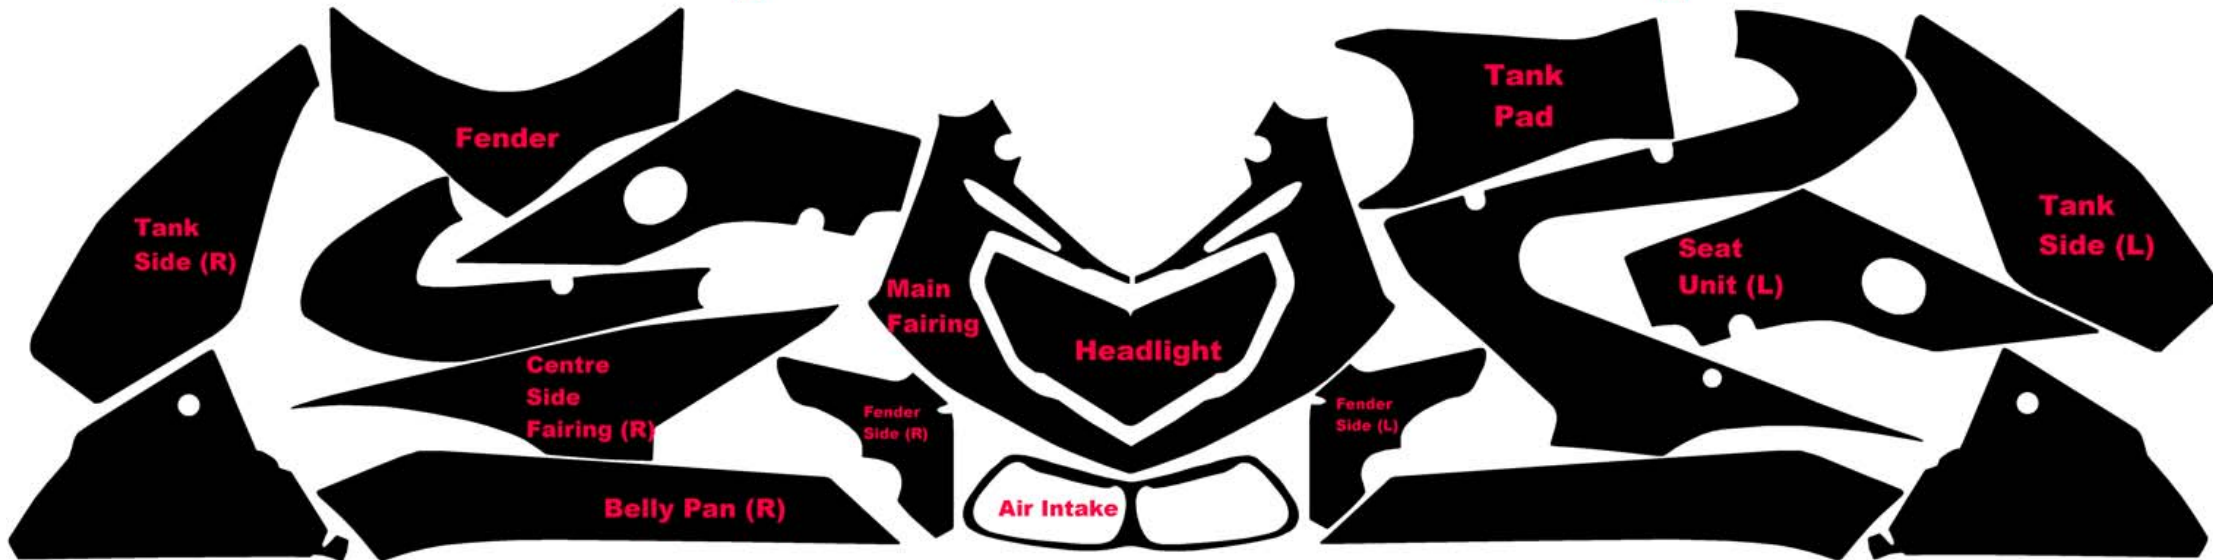

INSTALLATION NOTES

TANK PAD - Start at fuel cap & fix in direction of seat.

AIR INTAKE - Apply with neat water & start/fix in centre & tension sides to fit.

TOP SIDE FAIRING - Start at top of the fuel tank.